

December 2017

SERVICE MANUAL R410A

Outdoor unit [Models Name] PUY-SP36VKA2	[Service Ref.] PUY-SP36VKA2.TH(-TH/-NE/-VN)
PUY-SP42VKA2	PUY-SP42VKA2.TH(-TH/-NE/-VN)
PUY-SP48VKA2	PUY-SP48VKA2.TH(-TH/-NE/-VN)
PUY-SP36YKA2	PUY-SP36YKA2.TH(-TH/-NE/-VN)
PUY-SP42YKA2	PUY-SP42YKA2.TH(-TH/-NE/-VN)







REFERENCE MANUAL

INDOOR UNIT SERVICE MANUAL

Model name	Service Ref.
PLY-SP36/42/48EA	PLY-SP36/42/48EA.TH(-TH/-NE/-VN)
PCY-SP36/42/48KA2	PCY-SP36/42/48KA2.TH
PCY-SP36/42/48KAL2	PCY-SP36/42/48KAL2.TH-TH
PEY-SP36/42/48JA2	PEY-SP36/42/48JA2.TH(-TH/-NE/-VN)
PEY-SP36/42/48JAL2	PEY-SP36/42/48JAL2.TH-TH
PSY-SP36/42/48KA	PSY-P36/42/48KA

SAFETY PRECAUTION

ALWAYS OBSERVE FOR SAFETY

Before obtaining access to terminal, all supply circuits must be disconnected.

CAUTIONS RELATED TO NEW REFRIGERANT

Cautions for units utilizing refrigerant R410A

Preparation before the repair service.

- Prepare the proper tools.
- Prepare the proper protectors.
- Provide adequate ventilation.
- After stopping the operation of the air conditioner, turn off the power-supply breaker.
- Discharge the condenser before the work involving the electric parts.

Precautions during the repair service.

- Do not perform the work involving the electric parts with wet hands.
- Do not pour water into the electric parts.
- Do not touch the refrigerant.
- Do not touch the hot or cold areas in the refrigerating cycle.
- When the repair or the inspection of the circuit needs to be done without turning off the power, exercise great caution not to touch the live parts.

Use new refrigerant pipes.

In case of using the existing pipes for R22, be careful with the following.

- Be sure to clean the pipes and make sure that the insides of the pipes are clean.
- Change flare nut to the one provided with this product.
 Use a newly flared pipe.
- · Avoid using thin pipes.

Make sure that the inside and outside of refrigerant piping is clean and it has no contaminants such as sulfur, oxides, dirt, shaving particles, etc, which are hazard to refrigerant cycle. In addition, use pipes with specified thickness.

Contamination inside refrigerant piping can cause deterioration of refrigerant oil, etc.

Store the piping indoors, and both ends of the piping sealed until just before brazing.

(Leave elbow joints, etc. in their packaging.)

If dirt, dust or moisture enters into refrigerant cycle, that can cause deterioration of refrigerant oil or malfunction of compressor.

The refrigerant oil applied to flare and flange connections must be ester oil, ether oil or alkylbenzene oil in a small amount.

If large amount of mineral oil enters, that can cause deterioration of refrigerant oil, etc.

Charge refrigerant from liquid phase of gas cylinder.

If the refrigerant is charged from gas phase, composition change may occur in refrigerant and the efficiency will be lowered.

Do not use refrigerant other than R410A.

If other refrigerant (R22, etc.) is used, chlorine in refrigerant can cause deterioration of refrigerant oil, etc.

Use a vacuum pump with a reverse flow check valve.

Vacuum pump oil may flow back into refrigerant cycle and that can cause deterioration of refrigerant oil, etc.

Use the following tools specifically designed for use with R410A refrigerant.

The following tools are necessary to use R410A refrigerant.

Tools for R410A				
Gauge manifold	Flare tool			
Charge hose	Size adjustment gauge			
Gas leak detector	Vacuum pump adaptor			
Torque wrench	Electronic refrigerant			
	charging scale			

Handle tools with care.

If dirt, dust or moisture enters into refrigerant cycle, that can cause deterioration of refrigerant oil or malfunction of compressor.

Do not use a charging cylinder.

If a charging cylinder is used, the composition of refrigerant will change and the efficiency will be lowered.

Use the specified refrigerant only.

Never use any refrigerant other than that specified. Doing so may cause a burst, an explosion, or fire when the unit is being used, serviced, or disposed of. Correct refrigerant is specified in the manuals and on the spec labels provided with our products. We will not be held responsible for mechanical failure, system malfunction, unit breakdown or accidents caused by failure to follow the instructions.

Ventilate the room if refrigerant leaks during operation. If refrigerant comes into contact with a flame, poisonous gases will be released.

[1] Cautions for service

- (1) Perform service after recovering the refrigerant left in unit completely.
- (2) Do not release refrigerant in the air.
- (3) After completing service, charge the cycle with specified amount of refrigerant.
- (4) If moisture or foreign matter might have entered the refrigerant piping during the service, ensure to remove them.

[2] Additional refrigerant charge

When charging directly from cylinder

- · Check that cylinder for R410A on the market is syphon type.
- · Charging should be performed with the cylinder of syphon stood vertically. (Refrigerant is charged from liquid phase.)



[3] Service tools

No.	Tool name	Specifications
1	Gauge manifold	Only for R410A
		Use the existing fitting specifications. (UNF1/2)
		· Use high-tension side pressure of 5.3MPa·G or over.
2	Charge hose	Only for R410A
		· Use pressure performance of 5.09MPa·G or over.
3	Electronic scale	—
(4)	Gas leak detector	• Use the detector for R134a, R407C or R410A.
5	Adaptor for reverse flow check	Attach on vacuum pump.
6	Refrigerant charge base	_
0	Refrigerant cylinder	Only for R410A Top of cylinder (Pink)
		Cylinder with syphon
8	Refrigerant recovery equipment	_

Use the below service tools as exclusive tools for R410A refrigerant.

PRECAUTIONS WHEN REUSING EXISTING R22 REFRIGERANT PIPES

(1) Flowchart

- Refer to the flowchart below to determine if the existing pipes can be used and if it is necessary to use a filter dryer.
- If the diameter of the existing pipes is different from the specified diameter, refer to technological data materials to confirm if the pipes can be used.

The existing pipe thickness meets specifica-	Measure the existing check for damage.	pipe thickness and	The existing pipe thickness does not me	
tions and the pipes are not damaged.			specifications or the pipes are damaged.	
Check if the existing air conditioner can operate				
	_			
After operating the cooling system for about 30	Note:			
minutes, do a pump down work.	If the existing air co	nditioner cannot oper	ate, use a	
Ļ	refrigerant recovery	device to collect the	remgerant.	
Disconnect the existing air conditioner from the	Note:			
pipes.	In case existing pip	es were used for gas	or oil heat	
Ļ	pump systems, be	sure to clean the pipe	·5.	
Attach the new air conditioner	7			
—	_			
Perform the airtight test, vacuum air purging, additional refrigerant charging (if necessary), and gas leak check.	,			
	-		Ļ	
Test run			The existing pipes cannot be reused.	
			Use new pipes.	

(2) Cautions for refrigerant piping work

New refrigerant R410A is adopted for replacement inverter series. Although the refrigerant piping work for R410A is same as for R22, exclusive tools are necessary so as not to mix with different kind of refrigerant. Furthermore as the working pressure of R410A is 1.6 times higher than that of R22, their sizes of flared sections and flare nuts are different.

① Thickness of pipes

Because the working pressure of R410A is higher compared to R22, be sure to use refrigerant piping with thickness shown below. (Never use pipes of 0.7 mm or below.)

0 1	0		
Nominal	Outside	Thickne	ss (mm)
dimensions(inch)	diameter (mm)	R410A	R22
1/4	6.35	0.8	0.8
3/8	9.52	0.8	0.8
1/2	12.70	0.8	0.8
5/8	15.88	1.0	1.0
3/4	19.05	-	1.0

Diagram below: Piping diameter and thickness

② Dimensions of flare cutting and flare nut

The component molecules in HFC refrigerant are smaller compared to conventional refrigerants. In addition to that, R410A is a refrigerant, which has higher risk of leakage because its working pressure is higher than that of other refrigerants. Therefore, to enhance airtightness and strength, flare cutting dimension of copper pipe for R410A has been specified separately from the dimensions for other refrigerants as shown below. The dimension B of flare nut for R410A also has partly been changed to increase strength as shown below. Set copper pipe correctly referring to copper pipe flaring dimensions for R410A below. For 1/2 and 5/8 inch pipes, the dimension B changes. Use torque wrench corresponding to each dimension.





Flare cutting dimer	nsions			Flare nut dimension	ns			_
Nominal	Outside	Dimensio	Dimension A (+0 / 0.4)(mm)		Outside	Dimens	ion B (mm)]
dimensions(inch)	diameter (mm)	R410A	R22	dimensions(inch)	diameter (mm)	R410A	R22]
1/4	6.35	9.1	9.0	1/4	6.35	17.0	17.0]
3/8	9.52	13.2	13.0	3/8	9.52	22.0	22.0	* 36.0mm fo
1/2	12.70	16.6	16.2	1/2	12.70	26.0	24.0	indoor unit
5/8	15.88	19.7	19.4	5/8	15.88	29.0 *	27.0	
3/4	19.05	_	23.3	3/4	19.05	_	36.0	

③ Tools for R410A (The following table shows whether conventional tools can be used or not.)

Tools and materials	Use	R410A tools	Can R22 tools be used?	Can R407C tools be used?
Gauge manifold	Air purge, refrigerant charge	Tool exclusive for R410A	×	×
Charge hose	and operation check	Tool exclusive for R410A	×	×
Gas leak detector	Gas leak check	Tool for HFC refrigerant	×	0
Refrigerant recovery equipment	Refrigerant recovery	Tool exclusive for R410A	×	×
Refrigerant cylinder	Refrigerant charge	Tool exclusive for R410A	×	×
Applied oil	Apply to flared section	Ester oil and alkylbenzene oil (minimum amount)	×	Ester oil: O Alkylbenzene oil: minimum amount
Safety charger	Prevent compressor malfunction when charging refrigerant by spraying liquid refrigerant	Tool exclusive for R410A	×	×
Charge valve	Prevent gas from blowing out when detaching charge hose	Tool exclusive for R410A	×	×
Vacuum pump	Vacuum drying and air purge	Tools for other refrigerants can be used if equipped with adap- ter for reverse flow check	△ (Usable if equipped with adapter for rever- se flow)	△ (Usable if equipped with adapter for rever- se flow)
Flare tool	Flaring work of piping	Tools for other refrigerants can be used by adjusting flaring dimension	△ (Usable by adjusting flaring dimension)	△ (Usable by adjusting flaring dimension)
Bender	Bend the pipes	Tools for other refrigerants can be used	0	0
Pipe cutter	Cut the pipes	Tools for other refrigerants can be used	0	0
Welder and nitrogen gas cylinder	Weld the pipes	Tools for other refrigerants can be used	0	0
Refrigerant charging scale	Refrigerant charge	Tools for other refrigerants can be used	0	0
Vacuum gauge or thermis-	Check the degree of vacuum. (Vacuum	Tools for other refrigerants	0	0
tor vacuum gauge and	valve prevents back flow of oil and refri-	can be used		
vacuum valve	gerant to thermistor vacuum gauge)			
Charging cylinder	Refrigerant charge	Tool exclusive for R410A	X	

 \times : Prepare a new tool. (Use the new tool as the tool exclusive for R410A.)

 \triangle : Tools for other refrigerants can be used under certain conditions.

○ : Tools for other refrigerants can be used.

SPECIFICATIONS

6	nuice F	lof								
					PUY-SP36VKA2.TH(-TH/-NE/-VN)	PUY-SP42VKA2.TH(-TH/-NE/-VN)	PUY-SP48VKA2.TH(-TH/-NE/-VN)	PUY-SP36YKA2.TH(-TH/-NE/-VN)	PUY-SP42YKA2.TH(-TH/-NE/-VN)	PUY-SP48YKA2.TH(-TH/-NE/-VN)
	ae			1			Coc	oling		
	power	r supply		Asia	Single phase, 5	60/60 Hz, 220 - 2	40/220 - 230 V	3-phase,	50/60 Hz, 380) - 415 V
	(phas	e,cycle,vol	tage)	Thailand/ Vietnam	Single	phase, 50 Hz	220 V	3-ph	ase, 50 Hz, 38	30 V
	Max current A					0 - 240 V	5-phase	10	- +15 V	
	External finish			20	2	9		12		
	Exteri	hai tinish					Munsell 3	BY 7.8/1.1		
	Refrig	erant cont	rol				Linear Expa	Insion Valve		
	Compressor					Herr	netic			
		Motor out	put	kW	1.5 2.5 1.5 2.5				5	
		Starter typ	be		Inverter					
TDOOR UNIT		Protection	devices		Discharge thermo Comp.shell thermo Over current protection Over heat protection H.P. switch					
5	Heat	exchanger			Plate fin coil					
	Fan	Fan(drive)) x No.		Propeller fan x 1					
		Fan moto	r output	kW	0.200					
		Air volume	Э	m³/min	7	5	87	7	5	87
	Noise	level		dB(A)	52	53	56	52	53	56
	Dimer	nsions	W	mm			1,0)50		
			D	mm	330+25					
			Н	mm			98	31		
	Weigh	nt		kg	64 72 65 73			3		
	Refrig	erant	·				R4′	10A		
		Charge	·	kg			2	.8		
		Oil		L	0.46	1.10		0.46	1.10	
Q	Pipe s	size O.D	Liquid	mm			9.52	(3/8)		
			Gas	mm			15.88	3(5/8)		
	Conn	ection	Indoor sid	le	Flared					
AN	metho	bd	Outdoor s	ide			Fla	red		
UER BER	Betwe	en the	Height dif	ference			Maximu			
REFRI	indoo Outdo	r & oor unit	Piping length		Maximum 30 m					

REFILLING REFRIGERANT CHARGE (R410A : kg)

Service Bof		Initial				
Service Rei.	10m	20m	30m	40m	50m	charged
PUY-SP36VKA2.TH(-TH/-NE/-VN)						
PUY-SP36YKA2.TH(-TH/-NE/-VN)						
PUY-SP42VKA2.TH(-TH/-NE/-VN)						
PUY-SP42YKA2.TH(-TH/-NE/-VN)	2.8	3.1	3.4	3.7	4.0	2.8
PUY-SP48VKA2.TH(-TH/-NE/-VN)						
PUY-SP48YKA2.TH(-TH/-NE/-VN)						
		Addition than 10	al charge is m.	required for	pipes longer]

COMPRESSOR TECHNICAL DATA

(41.20				
Service Ref.		PUY-SP36VKA2.TH(-TH/-NE/-VN)		
Winding Resistance (Ω)	U-V	0.95		
	U-W	0.95		
	W-V	0.95		

(at 20°C)

		(at 20°C)
Service Ref.		PUY-SP36YKA2.TH(-TH/-NE/-VN)
\A/in din a	U-V	1.65
Resistance	U-W	1.65
(Ω)	W-V	1.65

(at 20°C)

Service R	ef.	PUY-SP42/48VKA2.TH(-TH/-NE/-VN) PUY-SP42/48YKA2.TH(-TH/-NE/-VN)
Winding Resistance (Ω)	U-V	0.88
	U-W	0.88
	w-v	0.88

STANDARD OPERATION DATA PUY-SP36VKA2.TH(-TH/-NE/-VN) PUY-SI PUY-SP36YKA2.TH(-TH/-NE/-VN) PUY-SI

PUY-SP42VKA2.TH(-TH/-NE/-VN) PUY-SP42YKA2.TH(-TH/-NE/-VN)

PUY-SP48VKA2.TH(-TH/-NE/-VN) PUY-SP48YKA2.TH(-TH/-NE/-VN)

Representative matching			PLY-SI	P36EA	PLY-S	P42EA	PLY-SP48EA					
Mode				COOLING								
Total	Capacity W			10	.6	12	2.3	14.1				
	input		kW	3.	52	4.	30	6.02				
Electrical Indoor				PLY-SI	P36EA	PLY-S	P42EA	PLY-SP48EA				
circuit	Phase,Hz			1,50)/60	1,50	0/60	1,50/60				
	Voltage		V	220-230-240/220								
	Current		V	0.9	91		0.	99				
	Outdoor	or		PUY-SP36VKA2	PUY-SP36YKA2	PUY-SP42VKA2	PUY-SP42YKA2	PUY-SP48VKA2	PUY-SP48YKA2			
	Phase,Hz			1,50/60	3,50/60	1,50/60	3,50/60	1,50/60	3,50/60			
	Voltage		V	220-230-240/220	380-400-415/380	220-230-240/220	380-400-415/380	220-230-240/220	380-400-415/380			
	Current		A	16.6-15.9- 15.3/16.6	6.2-6.0-5.8/6.2	20.1-19.3- 18.5/20.1 7.6-7.3-7.0/7.6		28.1-26.8- 25.7/28.1	10.4-9.9-9.6/10.4			
Refrigerant	Discharge Pressure MPa			3.1	12	3.	19	3.38				
circuit	Suction pressure MI			0.9	94	0.	82	0.	72			
	Discharge temperature		°C	68	9.0	75	5.7	88.4				
	Condensing temperature		°C	49	.9	50).3	52.2				
	Suction temperature °C			10	.4	6.5		3.7				
	Ref. pipe length m			7.	.5	7.5		7.5				
Indoor	Intake air	DB	°C	2	7	2	.7	27				
side	temperature	WB	°C	1	9	19		19				
	Discharge air temperature DB		°C	13	5.1	12.1		10.7				
Outdoor	Intake air	DB	°C	3	5	3	5	35				
side	temperature	WB	°C	2	4	2	4	24				

The unit of pressure has been changed to MPa based on international SI system. The conversion factor is : 1(MPa)=10.2(kgf/cm²)

OUTLINES AND DIMENSIONS



WIRING DIAGRAM

PUY-SP36VKA2.TH-TH



PUY-SP42VKA2.TH-TH

PUY-SP48VKA2.TH-TH

สัญลักษณ์	ชื่อ		สัญลักษณ์	ชื่อ		สัญลักษณ์	ชื่อ
TB1	ฐานเสียบขั้วสายไฟ<แหล่งจ่ายไฟ, เครื่องในบ้าน/เครื่องนอกบ้าน>	D	CL1, DCL2, DCL3	วีแอคเตอร์		SW7	สวิตซ์ <สวิตซ์การทำงาน>
MC	มอเตอร์ของคอมเพรสเซอร์	С	Y1, CY2	คาปาชิเตอร์		SW8	สวิตช์ <สวิตช์การทำงาน>
MF1	มอเตอร์พัดลม	Р	.В.	แผ่นวงจรกำลังไฟฟ้า		SW9	สวิตช์ <สวิตช์การทำงาน>
63H	สวิตซ์ป้องกันแรงดันสูง	С	.в.	แผ่นวงจรควบคุม		SWP	สวิตซ์ <การดูดเก็บสารทำความเย็น>
TH4	เทอร์มิสเตอร์ <ท่อ Discharge>]	F1, F2, F3, F4	ฟิวส์ <t6.3al250v></t6.3al250v>		CN31	คอนเน็คเตอร์ <การทำงานระบบฉุกเฉิน>
TH6	เทอร์มิสเตอร์ <ท่อ 2 ทาง>	1	SW1	สวิตช์ <การรีเซ็ตบันทึกประวัติ, Refrigerant Address>	1	CN51	คอนเน็คเตอร์ <สำหรับต่ออุปกรณ์เสริม>
TH7	เทอร์มิสเตอร์ <อุณหภูมิห้อง>]				CNDM	คอนเน็คเตอร์ <สำหรับต่ออุปกรณ์เสริม>
TH8	เทอร์มิสเตอร์ <แผ่นระบายความร้อน>	1	SW4	สวิตซ์ <สวิตซ์การทำงาน>	1	CNM	คอนเน็คเตอร์ <สำหรับต่ออุปกรณ์เสริม>
TH33	เทอร์มิสเตอร์ <พื้นด้านบนของคอมเพรสเซอร์>	1	SW5	สวิตช์ <สวิตช์การทำงาน, การเลือกรุ่น>			
LEV-B	วาล์วลดความดันแนวยาว	1	SW6	สวิตช์ <การเลือกรุ่น>	1		



คอนเน็คเตอร์ <การสื่อสารของ M-NET>

CN2M

PUY-SP36YKA2.TH-TH

PUY-SP42YKA2.TH-TH

PUY-SP48YKA2.TH-TH

สัญลักษณ์	ชื่อ	สัญลักษณ์		ชื่อ		สัญลักษณ์	ชื่อ
TB1	ฐานเสียบขั้วสายไฟ<แหล่งจ่ายไฟ>	A	CL4	รีแอคเตอร์		SW5	สวิตช์ <สวิตช์การทำงาน, การเลือกรุ่น>
TB2	ฐานเสียบขั้วสายไฟ<เครื่องในบ้าน/เครื่องนอกบ้าน>	DCL		รีแอคเตอร์		SW6	สวิตช์ <การเลือกรุ่น>
MC	มอเตอร์ของคอมเพรสเซอร์	RS		ตัวด้านทานสำหรับลดทอนกระแสสตาร์ท		SW7	สวิตช์ <สวิตช์การทำงาน>
MF1	มอเตอร์พัดลม	CY1, CY2		คาปาชิเตอร์		SW8	สวิตช์ <สวิตช์การทำงาน>
63H	สวิตช์ป้องกันแรงดันสูง	Р	.в.	แผ่นวงจรกำลังไฟฟ้า		SW9	สวิตซ์ <สวิตซ์การทำงาน>
TH4	เทอร์มิสเตอร์ <ท่อ Discharge>	N	I.F.	แผ่นวงจรกรองสัญญาณรบกวน	1	SWP	สวิตซ์ <การดูดเก็บสารทำความเย็น>
TH6	เทอร์มิสเตอร์ <ท่อ 2 ทาง>	С	.в.	แผ่นวงจรควบคุม		CN31	คอนเน็คเตอร์ <การทำงานระบบฉุกเฉิน>
TH7	เทอร์มิสเตอร์ <อุณหภูมิห้อง>	1	F1, F2, F3, F4	ฟิวส์ <t6.3al250v></t6.3al250v>	1	CN51	คอนเน็คเตอร์ <สำหรับต่ออุปกรณ์เสริม>
TH8	เทอร์มิสเตอร์ <แผ่นระบายความร้อน>	1	SW1	สวิตช์ <การรีเซ็ตบันทึกประวัติ, Refrigerant		CNDM	คอนเน็คเตอร์ <สำหรับต่ออุปกรณ์เสริม>
TH33	เทอร์มิสเตอร์ <พื้นด้านบนของคอมเพรสเซอร์>	1		Address>		CNM	คอนเน็คเตอร์ <สำหรับต่ออุปกรณ์เสริม>
LEV-B	วาล์วลดความดันแนวยาว]	SW4	สวิตช์ <การทดสอบ>	Γ		
					-	เมื่อเชื่อมต่อย	วะแดปเตอร์ M-NET



รุ่น	SW6-4, 5, 6, 7, 8	SW5-5
36Y	เปิด ปิด 1 2 3 4 5 6 7 8	เปิด ปิด 1 2 3 4 5 6
42Y	เปิด ปิด 1 2 3 4 5 6 7 8	เปิด ปิด 1 2 3 4 5 6
48Y	เปิด ปิด 1 2 3 4 5 6 7 8	เปิด ปิด 1 2 3 4 5 6

สัญลักษณ์	ชื่อ
TB7	ฐานเสียบขั้วสายไฟ <การเชื่อมต่อ M-NET>
CN5	คอนเน็คเตอร์ <การส่งผ่าน>
CND	คอนเน็คเตอร์ <แหล่งจ่ายไฟ>
CN2M	คอนเน็คเตอร์ <การสื่อสารของ M-NET>

WIRING SPECIFICATIONS

FIELD ELECTRICAL WIRING (power wiring specifications)

Outdoor unit model			SP36V	SP42, 48V	SP36, 42, 48Y	
Outdoor unit power supply		~/N (single), 50 Hz, 220 - 240 V ~/N (single), 60 Hz, 220 - 230 V	~/N (single), 50 Hz, 220 - 240 V ~/N (single), 60 Hz, 220 - 230 V	3N~ (3ph 4-wires), 50 Hz, 380 - 415V 3N~ (3ph 4-wires), 60 Hz, 380V		
Outdoor u	nit input capacity Main switch (Breaker)	*1	25 A	40 A	16 A	
⁻²).	Outdoor unit power supply		3 × Min. 4	3 × Min. 6	5 × Min. 1.5	
Vire	Indoor unit-Outdoor unit	*2	3 × 1.5 (Polar)	3 × 1.5 (Polar)	3 × 1.5 (Polar)	
	Indoor unit-Outdoor unit earth	*2	1 × Min. 1.5	1 × Min. 1.5	1 × Min. 1.5	
Remote controller-Indoor unit		*3	2 × 0.3 (Non-polar)	2 × 0.3 (Non-polar)	2 × 0.3 (Non-polar)	
ting	Outdoor unit L-N (single) Outdoor unit L1-N, L2-N, L3-N (3 phase)	*4	AC 220 - AC 240V	AC 220 V - AC 240V	AC 220 V - AC 240V	
it rat	Indoor unit-Outdoor unit S1-S2	*4	AC 220 V	AC 220 V - AC 240V	AC 220 V - AC 240V	
Circu	Indoor unit-Outdoor unit S2-S3 *4		DC 24 V	DC 24 V	DC 24 V	
	Remote controller-Indoor unit	*4	DC 12 V	DC 12 V	DC 12 V	

*1. A breaker with at least 3.0 mm contact separation in each poles shall be provided. Use earth leakage breaker (NV).

Make sure that the current leakage breaker is one compatible with higher harmonics. Always use a current leakage breaker that is compatible with higher harmonics as this unit is equipped with an inverter.

The use of an inadequate breaker can cause the incorrect operation of inverter.

*2. Max. 45 m

- If 2.5 mm² used, Max. 50 m
- If 2.5 mm² used and S3 separated, Max. 80 m
- Use one cable for S1 and S2 and another for S3 as shown in the picture.
- Max. 50 m Total Max. for PEY. Wiring size 3 × 1.5 (Polar).
- *3. The 10 m wire is attached in the remote controller accessory
- *4. The figures are NOT always against the ground.
 - S3 terminal has DC 24 V against S2 terminal. However between S3 and S1, these terminals are NOT electrically insulated by the transformer or other device.

Notes: 1. Wiring size must comply with the applicable local and national code.

- 2. Power supply cords and Indoor/Outdoor unit connecting cords shall not be lighter than polychloroprene sheathed flexible cord. (Design 60245 IEC 57)
- 3. Use an earth wire which is longer than the other cords so that it will not become disconnected when tension is applied.
- 4. Installation must be comply with the electrical wiring rule.



A Warning:

In case of A-control wiring, there is high voltage potential on the S3 terminal caused by electrical circuit design that has no electrical insulation between power line and communication signal line. Therefore, please turn off the main power supply when servicing. And do not touch the S1, S2, S3 terminals when the power is energized. If isolator should be used between indoor unit and outdoor unit, please use 3-pole type.

Never splice the power cable or the indoor-outdoor connection cable, otherwise it may result in a smoke, a fire or communication failure.

1:1 system Electrical wiring



REFRIGERANT SYSTEM DIAGRAM

PUY-SP36VKA2.TH(-TH/-NE/-VN) PUY-SP36YKA2.TH(-TH/-NE/-VN)

PUY-SP42VKA2.TH(-TH/-NE/-VN) PUY-SP42YKA2.TH(-TH/-NE/-VN)

PUY-SP48VKA2.TH(-TH/-NE/-VN) PUY-SP48YKA2.TH(-TH/-NE/-VN)

Unit : mm (inch)

